

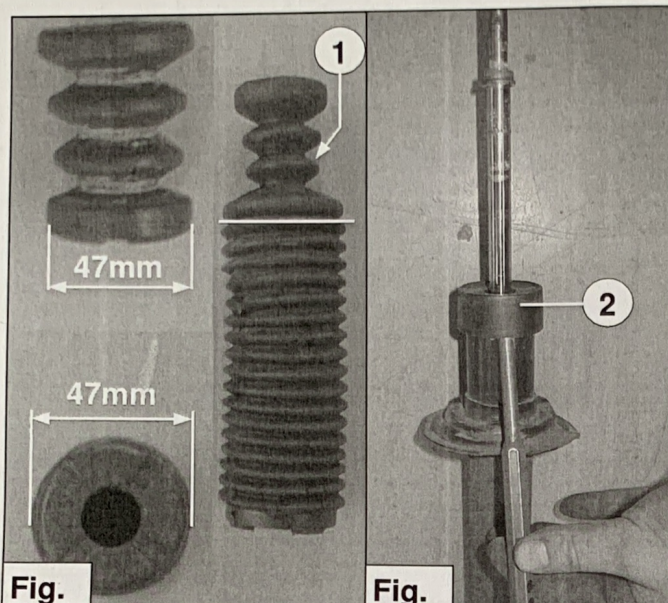


Fig. 1

Fig. 2

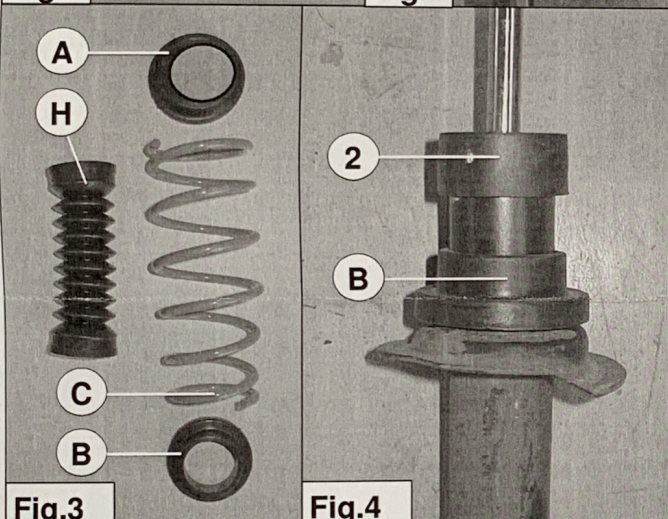


Fig. 3

Fig. 4

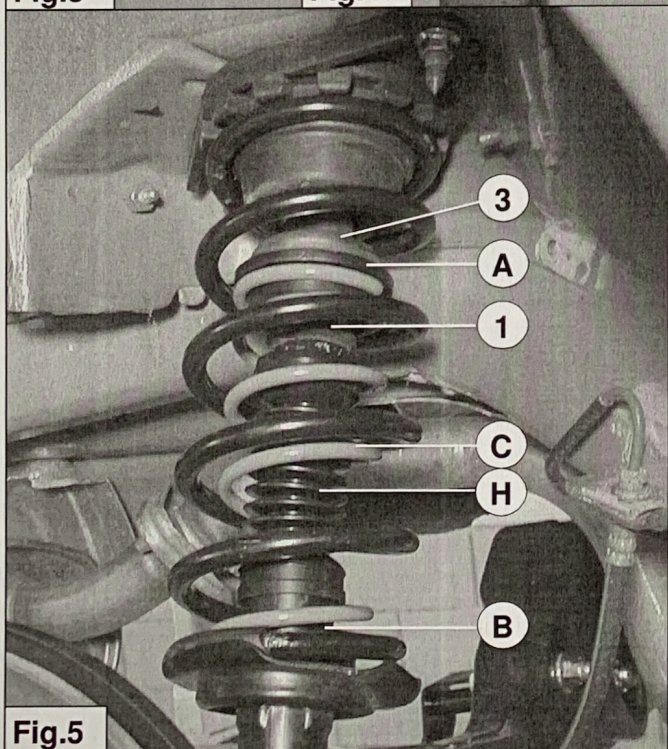


Fig. 5

NL

1. Raadpleeg het betreffende (electronische) werkplaatshandboek voor de aanhaalmomenten en de de- en montagevolgorden.
2. Gebruik veerspanners bij punt 4 t/m 15.
3. Veerpoot uitbouwen.
4. Verwijder hoofdveerschotel, let op de stand t.o.v. de schokdemper.
5. Verwijder de hoofdveer en buffer 1.
6. Knip de stofhoes van de buffer 1 af. Maak de buffer 1 op maat 47mm volgens fig.1.
7. Bevestig de stofhoes H op de buffer 1.
8. Verwijder de kunststof kap 2 van de schokdemperbuis. Zie fig. 2.
9. Plaats veerschotel B op de schokdemper en monteer de kunststof kap 2. Zie fig. 4.
10. Plaats de hoofdveer op de schokdemper.
11. Plaats hulpveer C op veerschotel B.
12. Plaats stofhoes H en buffer 1, bevestig stofhoes H om de bovenzijde van de schokdemperbuis.
13. Plaats de veerschotel A op de hulpveer C.
14. Plaats originele stalen kom 3 op veerschotel A, zorg dat de bovenkant van buffer 1 tegen de stalen kom rust en dat de stalen kom 3 in veerschotel A valt.
15. Monteer hoofdveerschotel.
16. Veerpoot inbouwen.
17. Koplamphoogte afstellen.

GB

1. Use the concerning (electronic) workshopmanual for the torques and the dis- and assembling order.
2. Use springclamps at point 4 to 15.
3. Remove strut.
4. Remove mainspringseat, note position related to shockabsorber tube.
5. Remove mainspring and bumpstop 1.
6. Cut the dustcover from bumpstop 1. Make the bumpstop 1 to size 47mm according fig.1.
7. Fit the dustcover H on bumpstop 1.
8. Remove the plastic cap from the shockabsorber tube. See fig. 2.
9. Place springseat B and mount the plastic cap 2 on the shockabsorber. See fig. 4
10. Place the mainspring on the schokabsorber.
11. Place auxiliary-spring C on springseat B.
12. Place dustcover H and bumpstop 1, fit dustcover H on top of shockabsorber tube.
13. Place springseat A on the auxiliary-spring C.
14. Fit original metal cup 3 on to springseat A, take notice that the upper side of the bumpstop 1 rests against the metal cup and the metal cup 3 fits into springseat A.
15. Fit mainspringseat.
16. Fit strut.
17. Readjust headbeams.